


**ProMedia Ultra 2.0**  
Personal Audio System

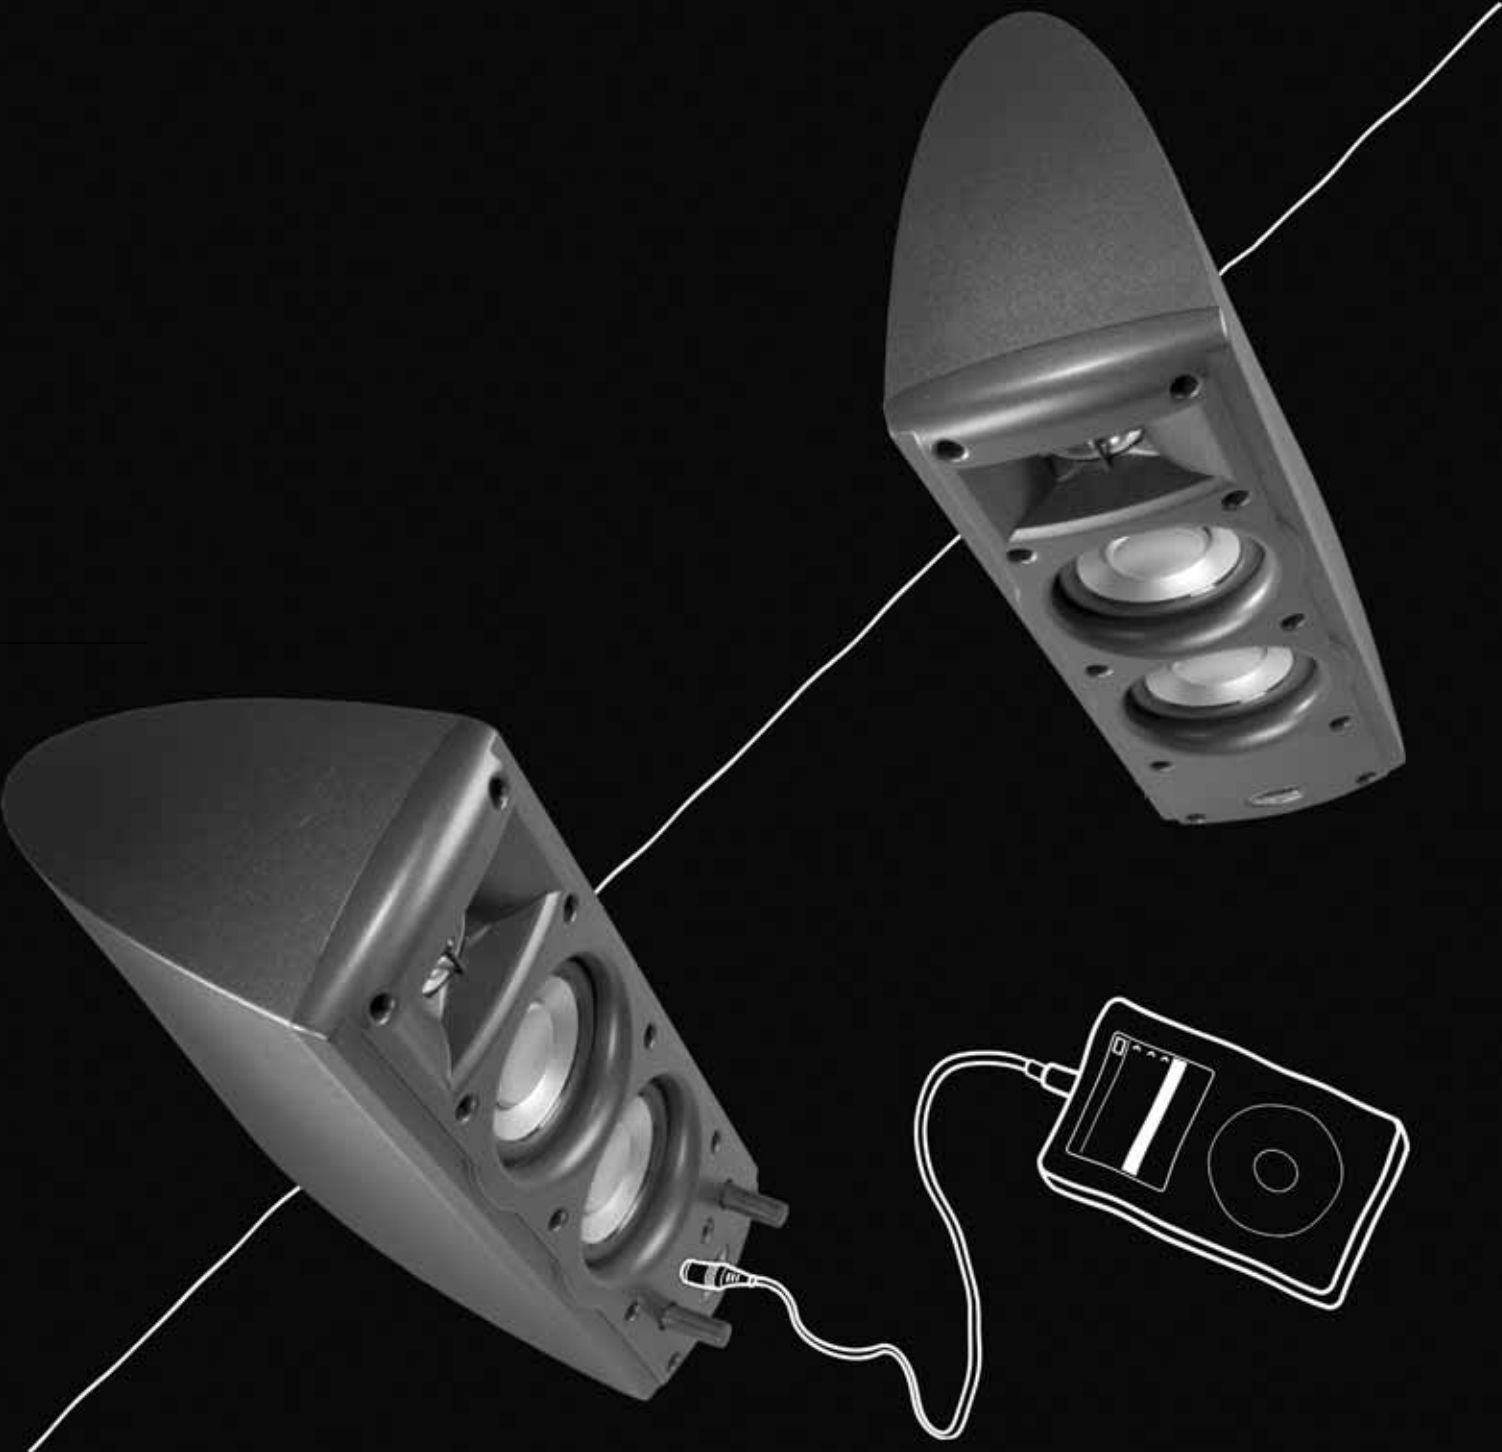

## IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.
12. USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



The Lightning Flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.

**WARNING:** To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids – such as a vase of flowers – should be placed on the product.



**WARNING:** Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer could void the users authority to operate this device.

No naked flame sources – such as candles – should be placed on the product.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

**SERVICE:** Equipment for servicing should be returned to the supplying dealer, or to the appointed service agents in your area. For service within the United States:

Klipsch Customer Service: 1-888-554-5665

If purchased outside the U.S., please contact your local dealer.

## PACKING LIST


- 1 control satellite and 1 passive satellite
- 1 Owner's manual
- 1 Stereo mini-plug cable
- 1 22 gauge speaker wire/ RCA terminations
- 1 Power supply with AC cord and power cable attached

## SPEAKER PLACEMENT

1. The two speakers should be positioned on each side of your computer monitor, with the control satellite on the right.
2. Do not cover up the ventilation slots or rear acoustic port of the enclosure and be sure to provide enough ventilation. It is normal for the area around the ventilation slots to be warm to the touch.
3. Avoid running speaker or power cables across an area of foot traffic.

## SPEAKER CONNECTION DIAGRAM

1. Do not plug in AC power until system setup is complete.
2. Connect mini plug cable from the control speaker to the primary audio source (computer, iPod®, etc.).
3. Connect RCA speaker cable from control (active) speaker to the passive speaker.  
Note: The active speaker plays right channel, and the passive speaker plays the left channel.
4. Connect DC power supply cable to the DC IN of the control speaker.

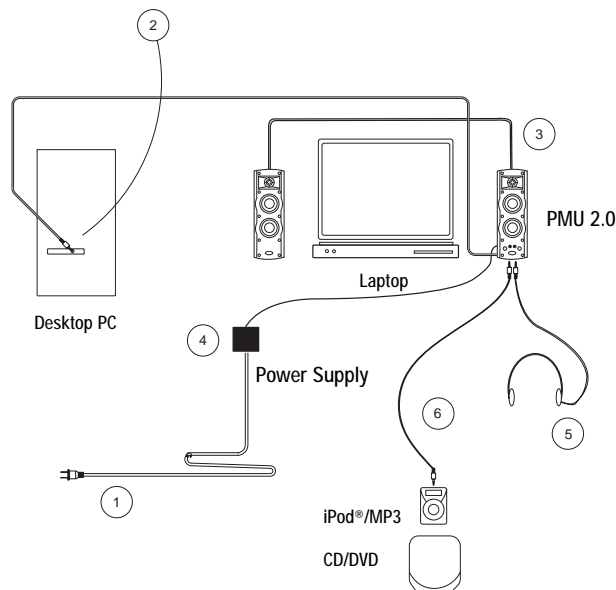

5. Plug headphone mini stereo plug into headphone jack, if desired.  
Note: The speakers will not play while headphones are connected.
6. Plug stereo mini plug into MP3/Aux jack. Plug stereo mini plug into MP3 player (for example).

## SOFTWARE AND HARDWARE GAIN CONTROLS

Software Volume Controls in Microsoft Windows


1. Click the Start button on your taskbar
2. Choose Accessories
3. Windows 95: Choose Multimedia  
Windows 98/2000: Choose Entertainment  
Windows XP: Choose Entertainment
4. Click on the Volume Control
5. Adjust the Wave Volume Elevator Button to halfway

Volume Control Programs

Some soundcard and/or PC manufacturers may have software that must be adjusted separately from the Windows volume control. Consult applicable manual for specific hardware documentation.

## CONTROL FEATURES

**Headphones:** The 1/8" stereo headphone output jack, located on the front of the master speaker, turns off the two speakers. The main volume control will adjust the headphone output. The bass control knob does not function in this mode.



**MP3/Aux:** The MP3/Auxiliary input jack is used with portable audio players. This signal will be mixed with the main source. To obtain the proper balance with the main signal, the level adjustments in the computer software and in the portable player will need to be adjusted. An example would be listening to an MP3 player while surfing the net and hearing associated sounds from various websites. The mixed sound may not be desirable, and you will ultimately determine how you use this feature.

**NOTE:** During playback of MP3 files, overall sound quality may be perceptibly degraded compared to other audio sources such as CD. This is caused by the encoding method and quality of the MP3 file. It is recommended that MP3 files be encoded at a minimum 128 bit rate.

## SPECIFICATIONS

(Visit [www.klipsch.com](http://www.klipsch.com) for more details)

Speaker Impedance:	3 ohms nominal
Master Speaker Features:	Bass and Main volume level controls LED power indicator MP3/Aux player line input with soundcard mixing function Headphone jack Direct path interface Slave speaker output RCA jack
Enclosure & Drivers:	Ported elliptical two-way enclosure with 25mm metalized polymer dome tweeter mated to MicroTractrix® Horn and dual 2.5" long-throw mid-bass drivers
Amplifier:	High-efficiency Class D power section and audio quality transformer designed for uncompressed full power sound

## TROUBLESHOOTING

If no sound, ensure that:

- Power, input, speaker cables and connectors are securely attached
- Software is properly installed and functioning
- Computer sound (control panel) volume is turned up and not muted
- Rotate volume knob clockwise to turn on, LED glowing

If one or more speakers have little or no sound, ensure that:

- All cables are connected properly
- Connectors are fully "seated" in soundcard and speakers
- Volume level controls are properly adjusted
- Computer software audio settings are adjusted for proper use
- Computer system's sound (control panel) volume is turned up

If the speakers exhibit distortion or buzzing:

- Turn down computer's overall volume (via control panel) and reduce speaker volume
- Turn down bass volume, as program signal may be too strong
- Plug the power cord into a surge protector

If there is noise or hissing and the volume is low even with main volume turned up:

- Turn up computer's sound volume (via control panel)
- Turn down main volume on control pod to compensate
- Ensure that software/hardware is properly installed and operating

If there is computer monitor interference:

- Increase the distance between the speakers and the computer monitor.

For more detailed information and FAQs, please visit [www.klipsch.com](http://www.klipsch.com).

### DC Power Adapter

The Ultra 2.0 is designed to be used only with the supplied DC power adapter.

### FCC and Canada EMC Statements

Approved under the verification provision of FCC Part 15 as a Class B Digital Device.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Certifications Statement:

ProMedia Ultra 2.0: Conforms to European Union Directives, Eligible to bear CE marking, Meets European Union Low Voltage Requirements: Safety per EN60065 Sixth Edition and IEC60065 Sixth Edition (CB Scheme); Meets European Union EMC Requirements: Emissions per EN55013:2001, EN61000-3-2:2000, and EN61000-3-3:1995; Immunity per EN55020:2002.

**Note:** EMC conformance testing is based on the use of supplied and recommended cable types and power supply. The use of other cable types may degrade EMC performances.

## WARRANTY—U.S. AND CANADA ONLY

KLIPSCH, LLC ("KLIPSCH") warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase. During the warranty period, KLIPSCH will repair or replace (at KLIPSCH's option) this product or any defective parts. Proof of purchase in the form of a bill of sale or receipted invoice from an authorized Klipsch dealer, which is evidence that this product is within the warranty period, must be presented or included to obtain warranty service. This warranty does not cover damage due to misuse, abuse, negligence, acts of God, accident, commercial use or modification of, or to any part of this product. This warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than KLIPSCH or someone authorized by KLIPSCH to do warranty work. Any unauthorized repairs will void this warranty. This warranty does not cover product sold AS IS or WITH ALL FAULTS. This warranty is invalid if the factory applied serial number or date stamp has been altered or removed from this product.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. KLIPSCH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PRACTICAL PURPOSE.

Some states do not allow the exclusion or limitation of incidental or consequential damages or implied warranties so the above exclusions may not apply to every customer. This warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, please follow these directions:

1. If you purchased this product from a retail store, please return this product to such store in its original packaging along with proof of purchase.
2. If you purchased this product from a computer manufacturer, please contact that manufacturer.
3. For purchases made through [www.klipsch.com](http://www.klipsch.com), please call KLIPSCH Customer Service at 1-888-554-5665. Product may only be returned to KLIPSCH after a Return Authorization number has been obtained from KLIPSCH.

Returned product must be shipped, freight prepaid to KLIPSCH in either its original packaging or packaging affording an equal degree of protection along with proof of purchase.

## WARRANTY—OUTSIDE THE U.S. AND CANADA

The warranty on this product if it is sold to a consumer outside of the United States or Canada shall comply with applicable law and shall be the sole responsibility of the distributor that supplied this product. To obtain any applicable warranty service, please contact the dealer from which you purchased this product, or the distributor that supplied this product.

