

# iGroove™ SXT


## Owner's Manual





## Important Safety Information

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.
12. USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

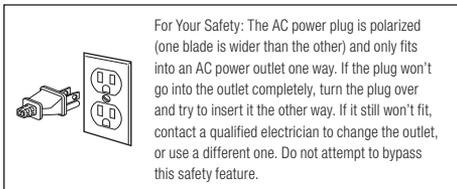

15. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.

**WARNING:** To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

**WARNING:** Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

**WARNING:** No naked flame sources – such as candles – should be placed on the product.

	<b>WARNING</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<b>WARNING:</b> Do Not Open! Risk of Electrical Shock. Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.		

**WARNING:** This product is intended to be operated ONLY from the AC Voltages listed on the back panel or included power supply of the product. Operation from voltages other than those indicated may cause irreversible damage to the product and void the products warranty. The use of AC Plug Adapters is cautioned because it can allow the product to be plugged into voltages in which the product was not designed to operate. If the product is equipped with a detachable power cord, use only the type provided with your product or by your local distributor and/or retailer. If you are unsure of the correct operational voltage, please contact your local distributor and/or retailer.

**CAUTION:** Place the equipment near a main power supply outlet and make sure that you can easily access the power breaker switch.

Adaptor I/P: 100-240VAC, 50-60Hz

Unit I/P: 15VDC, 3A


Ambient Temperature: 35° C

## Thank You

Congratulations on your purchase of the Klipsch iGroove™ SXT music system. The iGroove SXT is designed to allow you to share the contents of your iPod with the world around you. The iGroove SXT is a true two-way, stereo sound system incorporating two long-throw 2.5" (6.4cm) woofers in a ported enclosure and two horn-loaded tweeters. This system provides the accuracy, detail and output that will bring your music to life as only Klipsch can.


## Unpack the Box

Unpack the entire contents of the shipping box and make sure you have the following items.

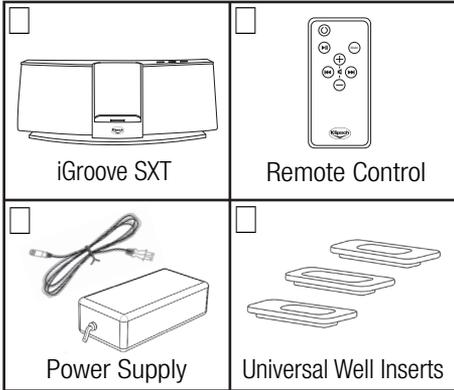


## System Setup

Place the iGroove SXT on a sturdy surface. Plug the power supply (A) into the rear of the iGroove SXT. Plug the AC power cord (B) into the power supply and then into a standard wall outlet.

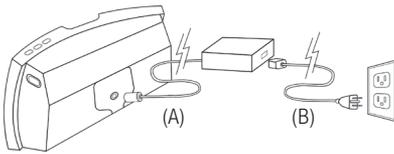

The iGroove SXT is intelligently designed to easily accommodate all iPods using the Apple 30-pin connector. To configure the iGroove SXT for your specific iPod size, simply place the appropriate dock insert into the dock area as shown below. Use the universal well insert that came with your iPod, or choose one of the three inserts provided.

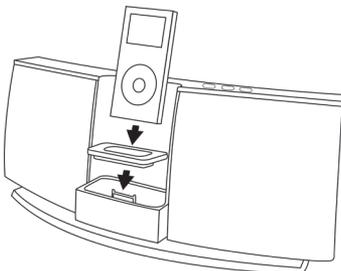


Now you are ready to dock your iPod. While your iPod is docked, its battery is charging (until it is fully charged).

## System Operation

### The Dock

Your iGroove SXT system is ready to perform as soon as you plug it in and dock an iPod. The Power button located on the top right of the iGroove SXT will light up "Red" in "Standby/Off" mode and "Blue" in "On" mode. The volume up and down buttons are located to the left of the Power button on the top right of the iGroove SXT.

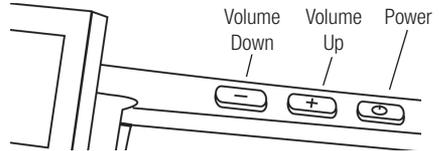

*Note: When the iPod is docked and its headphone mini-jack is in use, audio will play through the headphones as well as the iGroove SXT. The iPod's volume control will adjust the headphone level only and will not have any effect on the volume of the iGroove SXT.*


### The Remote

The wireless remote control operates the iGroove SXT as well as the iPod.

*Note: The remote must be pointed at the iGroove SXT to guarantee proper interaction.*

### Remote Buttons


- **Power** – Press to turn the iGroove SXT "On"; press again to put the iGroove SXT in "Standby/Off." This will also turn the iPod "Off."
- **Play/Pause** – Press once to "Pause" play; press again to resume play.
- **Track Selection** – Press **⏮** and **⏭** to move to the previous or next track; press and hold to reverse or fast-forward through the current track.
- **Volume** – Press + or – to increase or decrease the system volume level.
- **Mute** – Press to mute the volume. Press again to restore the volume, or press a volume key.

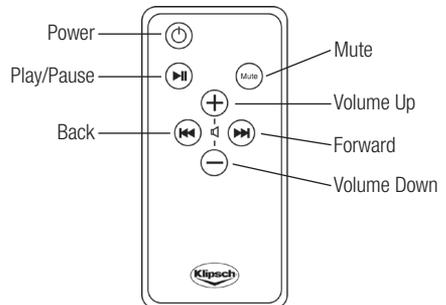

## Changing the Remote Control Battery

The remote battery will need to be changed when it stops working or when its performance is noticeably reduced. To remove the battery, simply pull the battery housing tab from the remote control (as shown in the diagram) and remove the battery. Replace only with a 3-volt CR2032 lithium battery.

*Note: Lighting and other room conditions can reduce remote performance.*

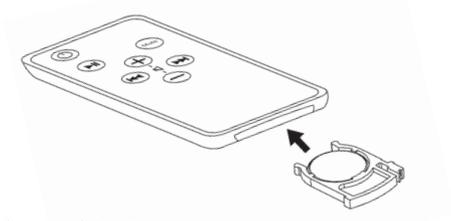

## S-Video Output

The iGroove SXT has an S-video output on the rear of the unit. This output can be used to send the iPod's video content to an external screen. An S-video cable (not included) must be used in this output. To view a photo, use the slideshow feature of the iPod, which will send video to the S-video cable.

## Aux Input

The Aux input located on the rear of the iGroove SXT allows you to connect other audio devices to the system. Simply connect the audio out (headphone) of the source to the Aux input of the iGroove SXT. A 3.5mm stereo mini cable (not included) must be used for proper operation.

## Warranty – U.S. and Canada

The Warranty below is valid only for sales to consumers in the United States or Canada. KLIPSCH, L.L.C. ("KLIPSCH") warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase. During the Warranty period, KLIPSCH will repair or replace (at KLIPSCH's option) this product or any defective parts.

Proof of purchase in the form of a bill of sale or receipted invoice, which is evidence that this product is within the Warranty period, must be presented or included to obtain Warranty service.

This Warranty is invalid if (a) the factory-applied serial number has been altered or removed from this product or (b) this product was not purchased from a KLIPSCH authorized dealer. You may call 1-800-KLIPSCH to confirm that you have an unaltered serial number and/or you purchased from a KLIPSCH authorized dealer.

This Warranty is only valid for the original purchaser and will automatically terminate prior to expiration if this product is sold or otherwise transferred to another party.

This Warranty does not cover cosmetic damage or damage due to misuse, abuse, negligence, acts of God, accident, commercial use or modification of, or to any part of, the product. This Warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than KLIPSCH or a KLIPSCH dealer which is authorized to do KLIPSCH warranty work. Any unauthorized repairs will void this Warranty. This Warranty does not cover product sold AS IS or WITH ALL FAULTS.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. KLIPSCH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow the exclusion or limitation of incidental or consequential damages or implied warranties so the above exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

## Warranty Outside the United States and Canada

The Warranty on this product if it is sold to a consumer outside of the United States or Canada shall comply with applicable law. To obtain any applicable warranty service, please contact the dealer from which you purchased this product, or the distributor that supplied this product.

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

In accordance with FCC requirements, changes or modifications not expressly approved by Klipsch could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.





# Power

# Detail

# Emotion

For over 60 years, we've made speakers for people who are as passionate about great sound as we are. That's why every Klipsch speaker is horn-loaded to create a remarkably accurate listening experience for your music and movies. From our smallest satellites to our acclaimed professional theater installations, our speakers deliver sound that's so lifelike, you have to feel it to believe it.

THE ULTIMATE SOUND EXPERIENCE™